
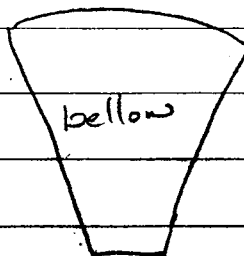



Rope Buckets

(Instructions)


packcloth pieces

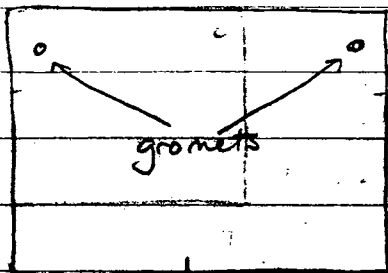

- Cordura pieces

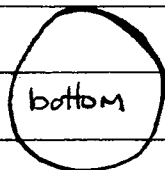


First: Sew the handles

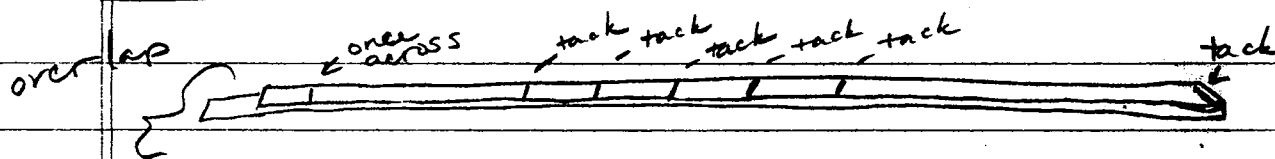


2

• Seam tape curved side of bellow

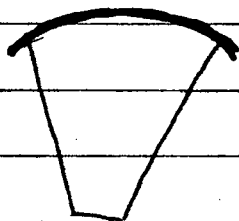

• cut apart & stack


- [3] with bucket body & bellow on each other coated side to coated side - stitch from seam tape at top of gromet hole to bottom.

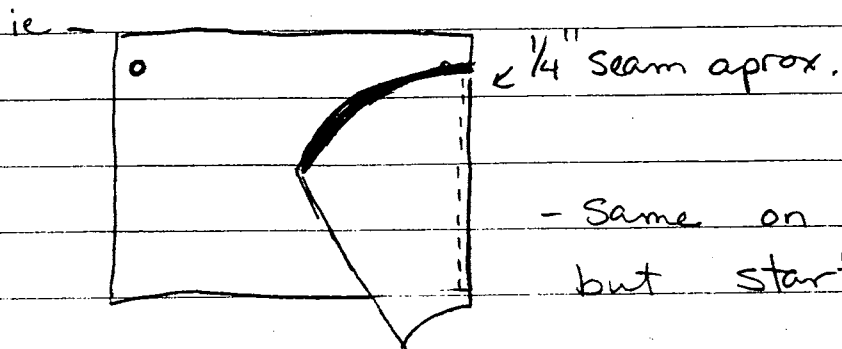

- Same on the other side but start at bottom.

- [4] - Sew on the zipper -

- with zipper up - put bucket on top & stitch down only on the bellow -

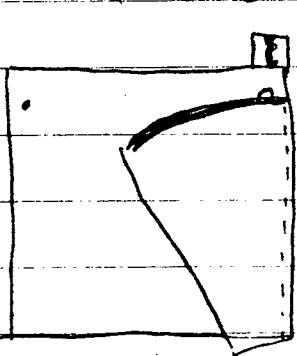


- then flip over & top stitch make sure your other stitching doesn't show.

- again only from seam tape down

- cut the zippers apart & separate as you go & stitch from bottom up
- flip over & top stitch

- ⑤ - put in the lace - (writing side of cordlock in)
- put cord lock on one side of all laces
 - store the other cord locks next to your reverse lever.
 - fold the top of the bucket $\frac{1}{4}$ " approx down & fold in to meet the top of the bellows.
 - thread lace in & put on the other side cordlock
 - This is a hard step.
 - Line up your bottom stitch w/ the top stitch & back tack the entire length.
 - Do the same on the other side

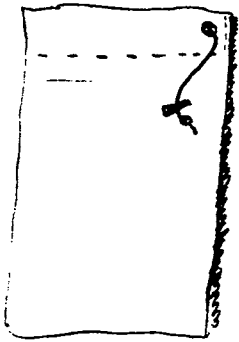


- sorry - that is the best drawing of it.

- 6] Put on slider - be sure to get them even on top
- pull inside out.
- 7] - Get your **13"** piece of webbing - put a 1" sliplock on it. The bottom of your rope bucket has a notch directly opposite of your zipper.
- Line up your webbing w/ the sliplock on top of it & put down your cordura bottom coated side up. Stitch until you get to the zipper.
 - Fold the webbing in approx 2" and line up on the zipper. Back tack.
 - Sew around the bottom twice

8 - Still with it inside out - stick down the handle

• Fold bucket in half (work on inside)

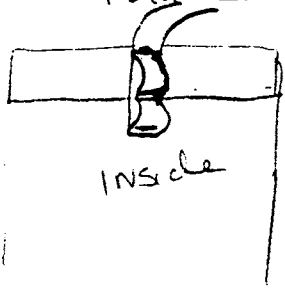

• tack at top where you already have one stitch on handle.

• push up longer piece to form a clip loop
stitch across existing stitch line on packcloth


• push up & form another loop

• tack the bottom

9 - Still on inside.

• Put 1" sliplock on smaller piece of webbing

• tack 2 times on inside in left hand corner

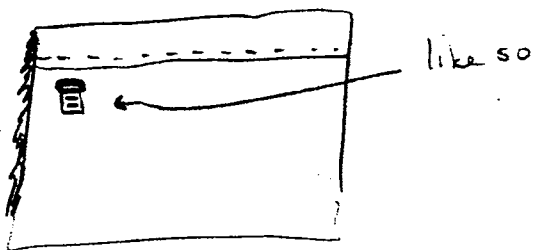

10 - Sew label on outside - over the top of the existing tacks -

11 - Flip inside out & thread handle into the bottom slip lock -

12 - Put on the shelf inspected -

ROPE BUCKETS (batches of 15)

Jan. '96

1" FLAT WEBBING

- (15) 1 @ 86" strap
- (15) 1 @ 4" for triglide
- (15) 1 @ 18" bottom

1/4" FLAT LACE

- (15) 1 @ 33" drawstring

PACKCLOTH (do not use stretchy fabric):

- (15) 1 tongue
- (15) 1 body piece **two grommets/sm. webb. reinf. on coated side**
one cut

CORDURA CLOTH:

- (15) 1 round bottom